



PRODUCT INFORMATION

FFP2 Valved Mask

Description:

Our FFP2 Valved Mask offers great protection during a range of activities including cutting, grinding and agricultural applications.

- ✓ Complies with EN 149:2001+A1:2009
- ✓ Category III
- ✓ Elasticated strap
- ✓ Adjustable nose bridge and soft nose seal for improved fit
- ✓ Valved to avoid heat build-up for greater comfort

Packaging:

10 pieces per box - 20 boxes per case

Product Codes:

STP2V Standard FFP2 Valved Mask - Standard

Standards:



0086 CAT III



Single use only
Do not reuse

PPE Regulation (EU) 2016/425 and personal protective equipment by the PPE Regulation 2016/425 as amend to apply in GB.

EN 149:2001+A1:2009 - Respiratory protective devices:

SUPERTOUCH® How To: Don & Doff Respiratory Protective Equipment

Part 1 Correctly fitting (donning) Respiratory Protective Equipment



1. Cup the respirator in one hand with the straps hanging downwards. Check the respirator for any damage. If it is defective, do not use it and dispose of it immediately.




2. Hold the respirator in place on your face. Make sure the nose piece is facing up.



3. Pull the bottom strap over your head and position it at the bottom of your neck, below the ears. Do the same with the top strap, positioning it at the crown of the head above the ears.



4. Tighten the straps by pulling and mould the metal nose strip with your fingertips to ensure a secure seal around your face.

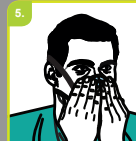

5. To ensure that the mask has no leakages, cup your hands over the filter material and breathe in. If the respirator sucks down hard onto the face, the seal is secure.



6. Continue to breathe in and out sharply. If the respirator is fitted correctly, you should not feel any leaks around its edges.

Part 2 Correctly removing (doffing) Respiratory Protective Equipment



1. Do not under any circumstances touch the front of the respirator as it may be contaminated.



2. To remove, pull the bottom strap over your head, followed by the top strap. Hold onto the top strap, using links to pull the respirator away from your face.



3. Carrying the respirator by the top strap, discard it into a waste container as soon as possible.



4. Make sure to wash your hands thoroughly before touching any other surfaces or objects.

www.supertouch.com
sales@supertouch.com
0345 130 9922

Stay Clean. Stay Safe. Stay Alert.

The information shown on this specification sheet is intended as a guide and is advisory only. All details were correct at the time of issue. As conditions of use are ultimately beyond our control, we advise that the product is tested for the particular application before use.

Issue No.: 5

Issue Date: 30.01.2023